

TAKE OUT TECH



Portable CD Player

Borrow for 2 weeks!

Lake Forest residents only
Ages 16 and up

Late fine: \$2/day

**CD
PLAYER**

3124300 609 4972



Portable CD Player

How to Use

1. To power the CD player, either:
 - plug one end of the included **AC adapter** into the side of the CD player and the other end into the wall **OR**
 - insert 4 C-size batteries (not included) into the bottom of the CD player
2. To turn on the CD player, tap the **ON/OFF** button on the side. Adjust the volume with the **VOLUME – or +** buttons on the side of the CD player.
3. To listen with headphones, insert headphones into the **headphone jack** on the side of the CD player.
4. To play a CD, select **CD mode** by pressing the **CD/USB button** on the side. Lift up the **CD tray**, insert a CD, then close the tray.
5. To start playing, press the **PLAY/PAUSE** button. To skip forward or backward a track, press the **SKIP + or –**. To stop playing, press **STOP**.
6. To play digital files from a USB drive, select **USB mode** by pressing the **CD/USB** button. Insert the USB drive into the **USB port**. The **PLAY/PAUSE**, **SKIP + or –**, and **STOP** buttons work the same as step 5.
7. To turn off the CD player, press the **ON/OFF** button.

Portable CD Player

Cost to Replace: \$40

Listen to music and audiobook CDs and even files saved to USB drive. AC power cord included. Optional (4) C batteries not included.

Parts List

- (1) This instruction booklet with envelope
- (1) CD player
- (1) AC adapter

More Resources

Browse Lake Forest Library's selection of audiobooks and music CDs

www.lakeforestlibrary.org/catalog

Rental Info

Two week checkout with one autorenewal (if there are no holds on the item).

Overdue fine: \$2 per day

Item must be returned inside to the Adult Circulation Desk. No book drop returns.

www.lakeforestlibrary.org/tot

