

TAKE OUT TECH



GoPro HERO5 Kit

Borrow for 2 weeks!

Lake Forest residents only
Ages 16 and up

Late fine: \$2/day

**KIT
GOPRO**


3124300 602 6792



GoPro HERO5 Kit

How to Use

1. To turn on the GoPro, press and hold the **Mode** button on the side of the camera for 3 seconds. You should hear several beeps. The camera will power on.
2. If the camera doesn't power on, the battery may need to be charged. You can access the **charging port** by sliding open the small door on the side/corner of the device. Press the small button while sliding the door open. Plug the **USB-C cable** into the port and plug the other end of the cable into the **AC power adapter**, then plug the adapter into a power outlet. **Make sure you close all doors and flaps before using. The GoPro is only waterproof when both the charging port and battery port doors are closed.**
3. The GoPro is now ready to start taking photos or videos. The default setting is **Hi-Def Video**. To start recording a video, press the **shutter button** on top of the camera. This same button stops recording.
4. To change your settings, use the GoPro's touch screen display. See next page.

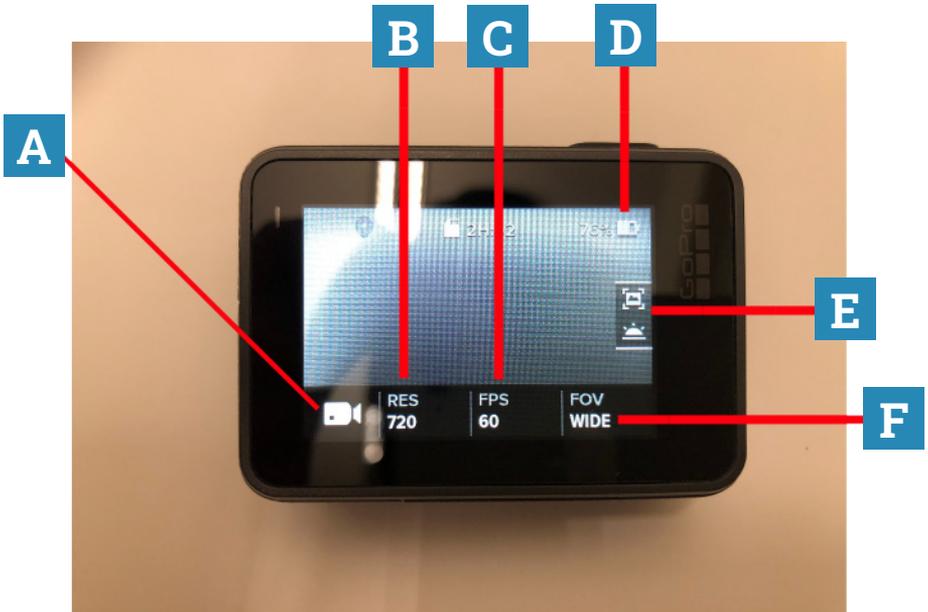

- A. Camera Mode:** Choose **Video** or **Camera** or **Time-lapse**.
- B. Resolution:** Choose your resolution for video recording.
- C. Frame Rate (FPS):** Select your frame rate. Higher is better for lots of motion. Lower is better for slower videos.
- D. Battery Meter:** How much battery is left.
- E. Image Stabilizer:** Default is **On**, press to turn off if necessary.
- F. Shooting Mode:** Select between a variety of different shooting styles (wide, narrow, etc.)

5. To use the GoPro attachments, the GoPro needs to be in its **housing**. Once in its housing, unscrew the **thumb screw** and **mounting buckle**. Use the thumb screw to attach the GoPro to any of the attachments.



Instructions continue on back of flap →

GoPro HERO5 Kit

← Instructions continued from inside



6. To transfer photos and video files to your computer, locate the **Micro SD card** in the **battery compartment** on the bottom of the GoPro. To open the door, press the button and slide the door to the side. It may stick a little due to the rubber gasket that makes the GoPro waterproof. Once you have the battery compartment door open you will notice the **Micro SD card** to the side of the **battery**. Press down on the card to get it to pop up for removal. You may want to use a paperclip or pen tip to press down on the card.
7. Once the **Micro SD card** pops up, you can pull the card out and insert it into the included **Micro SD card reader**. The Micro SD card reader can be plugged directly into your computer's USB port. Your computer should recognize the card and give you options for transferring your files.
8. To turn off the GoPro, press and hold the **Mode** button for 3 seconds.

GoPro HERO5 Kit

Cost to Replace: \$420

Take high-quality videos and pictures while on the go with a GoPro HERO5.

Parts List

- (1) This instruction booklet with envelope
- (1) GoPro carrying case
- (1) GoPro camera
- (1) Housing with mounting buckle and thumb screw
- (1) Battery (inside camera)
- (1) Micro SD card (inside camera)
- (1) Micro SD card adapter
- (1) Micro SD card reader
- (1) Chest mount
- (1) Head mount
- (1) Extendable selfie stick with thumb screw
- (1) Flexible tripod with thumb screw
- (1) Floating handle
- (1) USB-C cable
- (1) AC power adapter

Rental Info

Two week checkout with one autorenewal (if there are no holds on the item).

Overdue fine: \$2 per day

Item must be returned inside to the Adult Circulation Desk. **No book drop returns.**



www.lakeforestlibrary.org/tot