

TAKE TECH



Nintendo Switch Kit

Switch games on the Lower Level to borrow separately!

Borrow for 2 weeks!

Lake Forest residents only
Ages 16 and up

Late fine: \$2/day

**NINTENDO
SWITCH
CONSOLE**

3124300 634 6844



Nintendo Switch Kit

How to Use

1. Turn on the device using the **power button** in the upper left corner of the Switch.
2. **Controllers** can be used attached or detached. To attach, slide the controllers on each side of the Switch. The left side controller has an **L** on the top, and right side has an **R**.
3. To detach controllers, select the small button on the top back of the controller and slide it out. If you are using the Switch controllers unattached, be sure to place the Joy-Con straps around your wrists.
4. Use the joysticks to move around selections. Press **A** on the **Right Controller** to select an item on the screen. Press **B** to go back to the previous screen.
5. Insert a game card in the upper right section of the **console**. Switch games can be borrowed from Lake Forest Library. **No purchases may be made in the Nintendo eShop.**

How to Connect the Nintendo Switch to a TV

1. Open the back cover of the **dock**.
2. Connect the USB plug from the **AC adapter** to the top terminal of the **dock**. Connect the other end of the AC adapter to a wall outlet.



3. Connect one end of the **HDMI cable** to the bottom terminal of the **dock**. Connect the other end to an HDMI port on your TV or monitor.



4. Close the back cover of the Nintendo Switch **dock**.

5. Detach both **Joy-Con controllers** from the **console**.



6. Position the **console** so that the LCD screen faces in the same direction as the front panel on the **dock**, then insert the console into the dock. The LCD screen will shut off while the console is docked.



7. Turn on the TV and select the correct HDMI input.

Nintendo Switch Kit

Cost to Replace: \$375

The Nintendo Switch gaming system transforms from home console to portable system in a snap. Games are available to borrow separately on the Lower Level.

Parts List

- (1) This instruction booklet with envelope
- (1) Nintendo Switch carrying case
- (1) Nintendo Switch console
- (1) Nintendo Switch dock
- (4) Joy-Con controllers
- (4) Joy-Con straps
- (1) Joy-Con grip
- (1) HDMI cable
- (1) Nintendo Switch AC adapter

More Resources

Nintendo Switch website

nintendo.com/switch

Rental Info

Two week checkout with one autorenewal (if there are no holds on the item).

Overdue fine: \$2 per day

Item must be returned inside to the Adult Circulation Desk. No book drop returns.



www.lakeforestlibrary.org/tot