

TAKE OUT TECH



Insignia Projector and Screen Kit

Requires an HDMI port on your computer or tablet,
or an HDMI adapter (not included).

Borrow for 2 weeks!

**Lake Forest residents only
Ages 16 and up**

Late fine: \$2/day

**KIT
SLIMLINE PICO
PROJECTOR
AND SCREEN**

3124300 634 6687




Insignia Projector

How to Use the Projector




DO NOT: Store or use the projector in an extremely hot area ... Disassemble or modify the projector ... Block the vents on the side or top of the projector.

Left

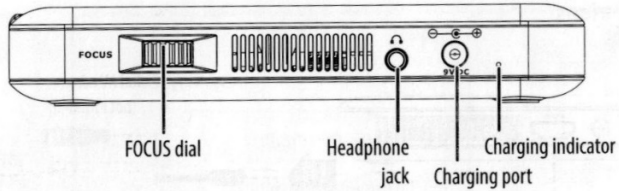


Right

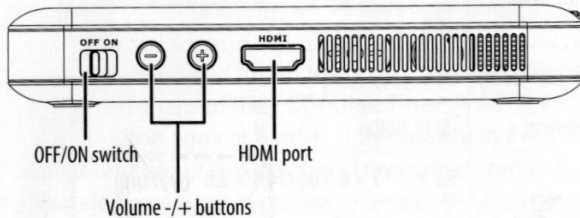


1. Charge your projector with the **AC power adapter** until the **Charging indicator lights** change from red to green.
2. Connect the **Projector** to your device (computer or tablet) using the **HDMI cord**. If your device does not have an HDMI port, you will need an HDMI adapter (not included).

Apple® iOS Devices

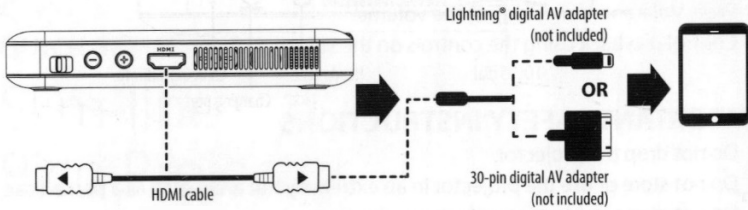


HDMI

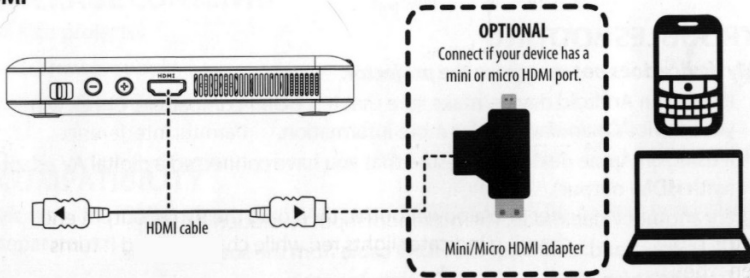


3. Place the **Projector** on a hard, flat, and steady surface. Slide the **OFF/ON** switch to turn it on.
4. Aim the **lens** at a screen or blank wall, then turn the **FOCUS** dial to bring the picture into focus.
5. Press **VOL+** or **VOL-** to adjust the Projector's volume level. Make sure that your device's volume is set to at least 50%. You can also connect headphones or speakers with a 3.5 mm audio cable (not included) into the **headphone jack** on the left side of the Projector.
6. When you are done using the projector, slide the **OFF/ON** switch to OFF.

Insignia Screen and Tripod


How to Use the Screen

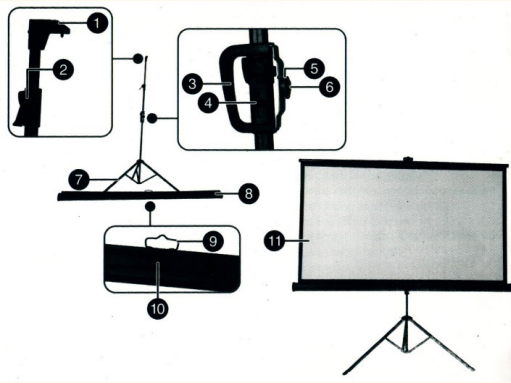

#	ITEM	DESCRIPTION
1	Screen hanger notch	Provides a notch to hang the projector screen.
2	Flip-lever center column lock	Locks or unlocks the first section of the tripod center column.
3	Screen height handle	Hold this handle to raise or lower the center column.
4	Flip-lever for the screen height handle lock	Locks or unlocks to slide up or down the screen height handle.
5	Positioning pin release lever	Push this release lever to insert or release the positioning pin in the positioning hole.
6	Positioning hole	Attaches to the positioning pin on the back of the projector screen.
7	Tripod leg	Supports the tripod and projector screen.
8	Screen enclosure	Enclosure for the screen when not in use.
9	Projector screen hanging bracket	Hang the projector screen using this bracket.
10	Positioning pin	Position projector screen by inserting it into positioning hole.
11	Projector screen	Displays pictures from the projector.

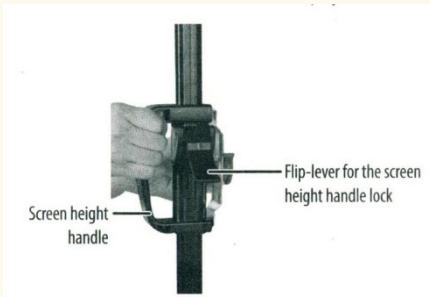

1. Open the three legs of the tripod and stand the tripod up.
2. Loosen the **Flip-lever center column lock**, then raise the center column so that the **Screen hanger notch** is just below your eye-level, then fasten the **Flip-lever center column lock** to secure the column in place.

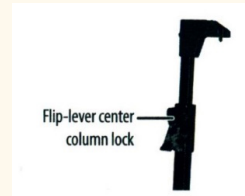


3. Unlock the **Flip-lever for the screen height handle lock** and slide the **Screen height handle** to your waist level, then fasten the **Flip-lever for the screen height handle** to secure it in place.


Insignia Screen and Tripod

How to Use the Screen continued...

4. While holding the **Screen enclosure**, push the red **Positioning pin release lever** and insert the **Positioning pin** into the **Positioning hole**. When the pin is fully inserted, the Positioning pin release lever will spring back into its non-released position.

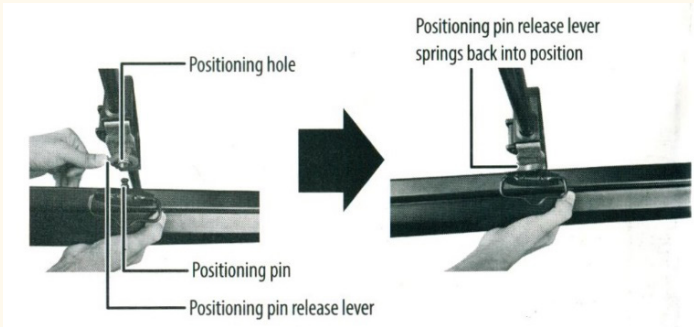

5. Pull out the Projector screen by pulling up on the **Projector screen hanging bracket**, then hang the Projector screen hanging bracket on the **Screen hanger notch** on top of the center column.

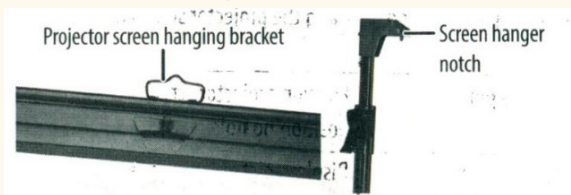

6. From the back side of the screen, you can now set the height of the screen. You can set the height of the bottom edge of the screen by unlocking the **Flip-lever for the screen height handle** and changing the position of the screen height handle. Change the height of the top edge of the screen by unlocking the **Flip-lever center column lock**, and raising the center column.
7. To take down screen, reverse the setup steps.

Insignia

Cost to Replace: Projector \$160, Screen \$120

Projector and Screen Kit

Bring presentations or movies to life. The projector is small in size but projects up to 80". The rechargeable battery provides 100 minutes of use.

Parts List

- | | |
|--|----------------------|
| (1) This instruction booklet with envelope | (1) HDMI cord |
| (1) Projector | (1) Pull down screen |
| (1) AC power adapter | (1) Tripod legs |

More Resources:

Insignia website

www.insigniaproducts.com

Harvard Business Review article

hbr.org/2013/06/how-to-give-a-killer-presentation

Rental Info

Two week checkout with one autorenewal (if there are no holds on the item).

Overdue fine: \$2 per day

Item must be returned inside to the Adult Circulation Desk. **No book drop returns.**

www.lakeforestlibrary.org/tot

